

100

Print [?] [X]

108

102

Printer: Minolta #2

Name: Minolta #2

Status: Idle

Type: Minolta PageWorks/Pro 25

Where: min1

Comment: 104

Print to file ☐

Properties

Page range: 106

☒ All

☐ Current page

☐ Pages: []

Enter page numbers and/or page ranges separated by commas. For example, 1,3,5-12

Copies

Number of copies: [1]

☒ Collate

Zoom

Pages per sheet: [1 Page]

Scale to paper size: [No Scaling]

Print what: [Document]

Print: [All pages in range]

Options... OK Cancel

FIG. 1A

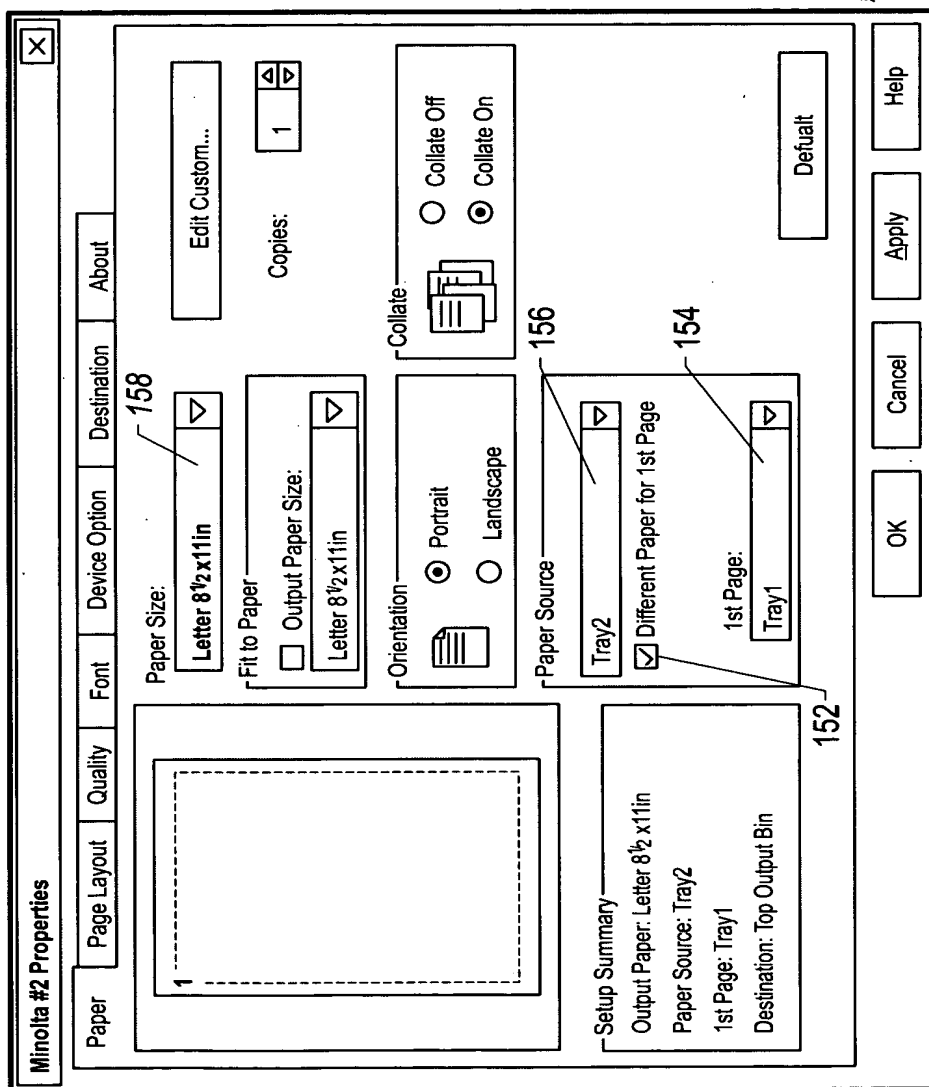


FIG. 1B

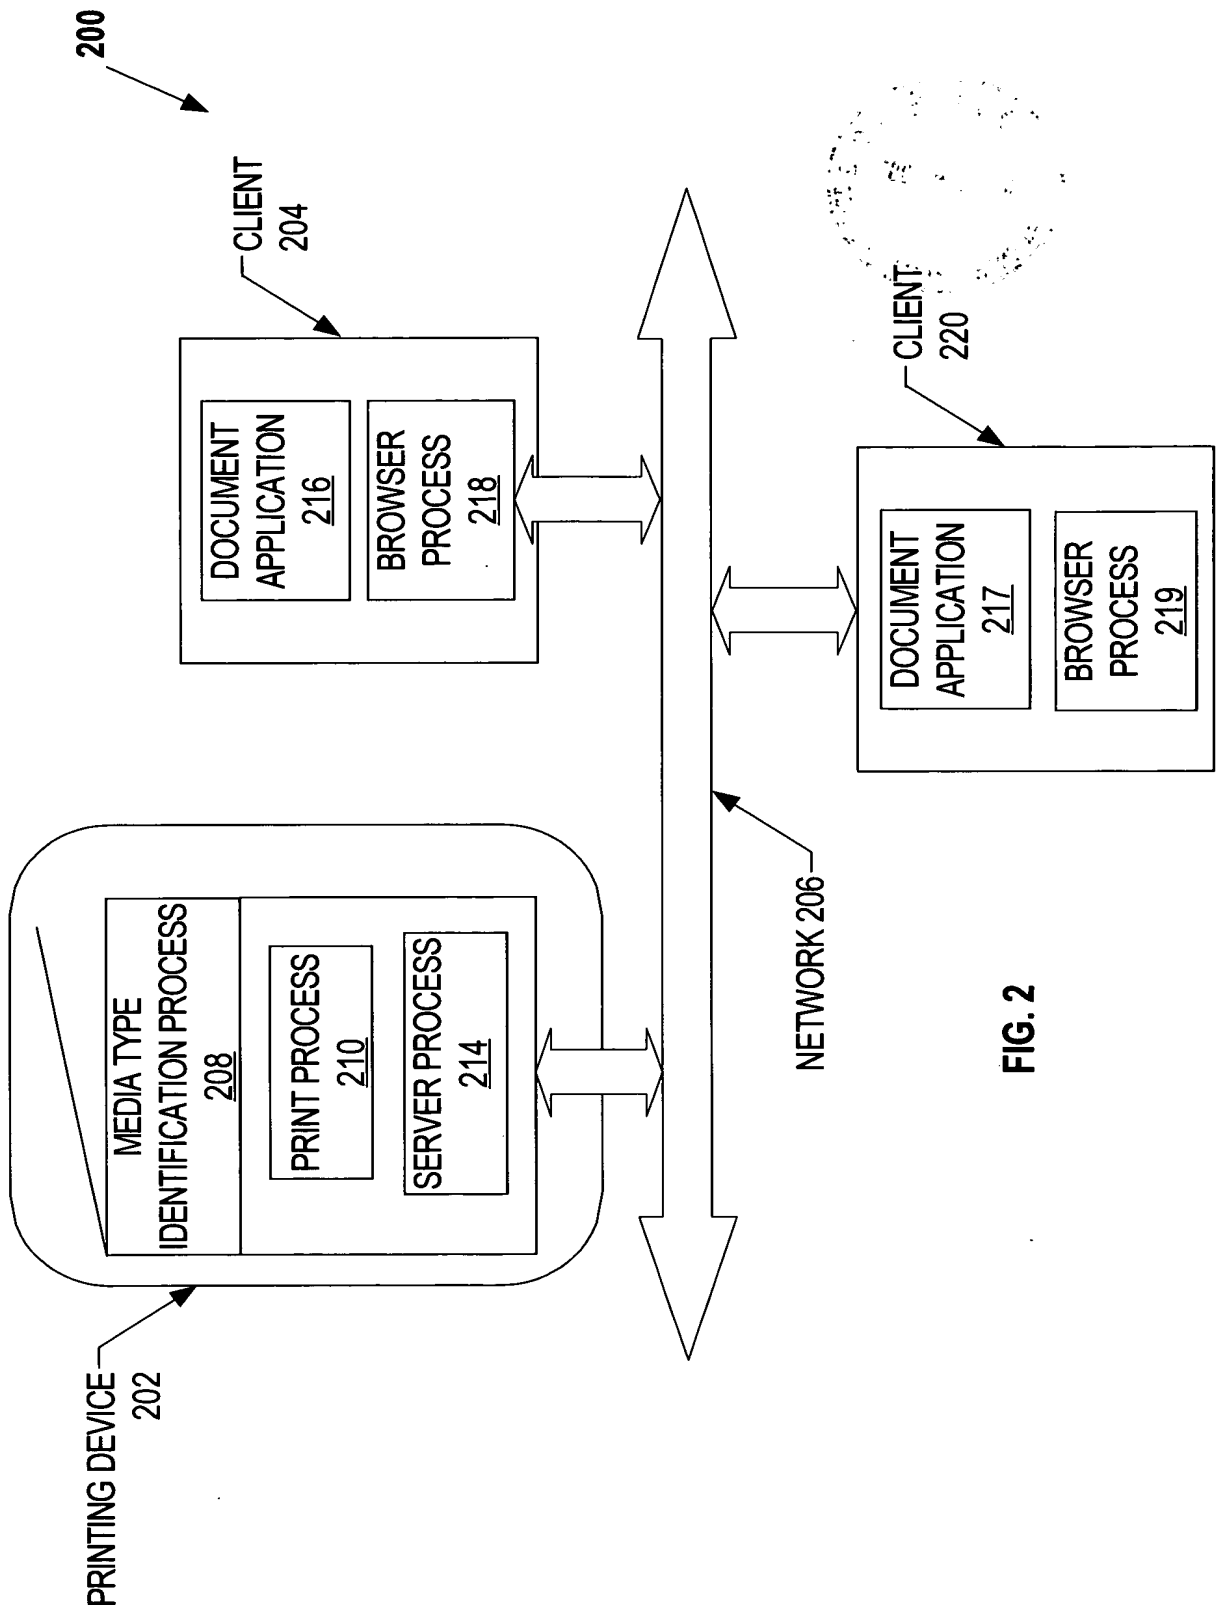


FIG. 2

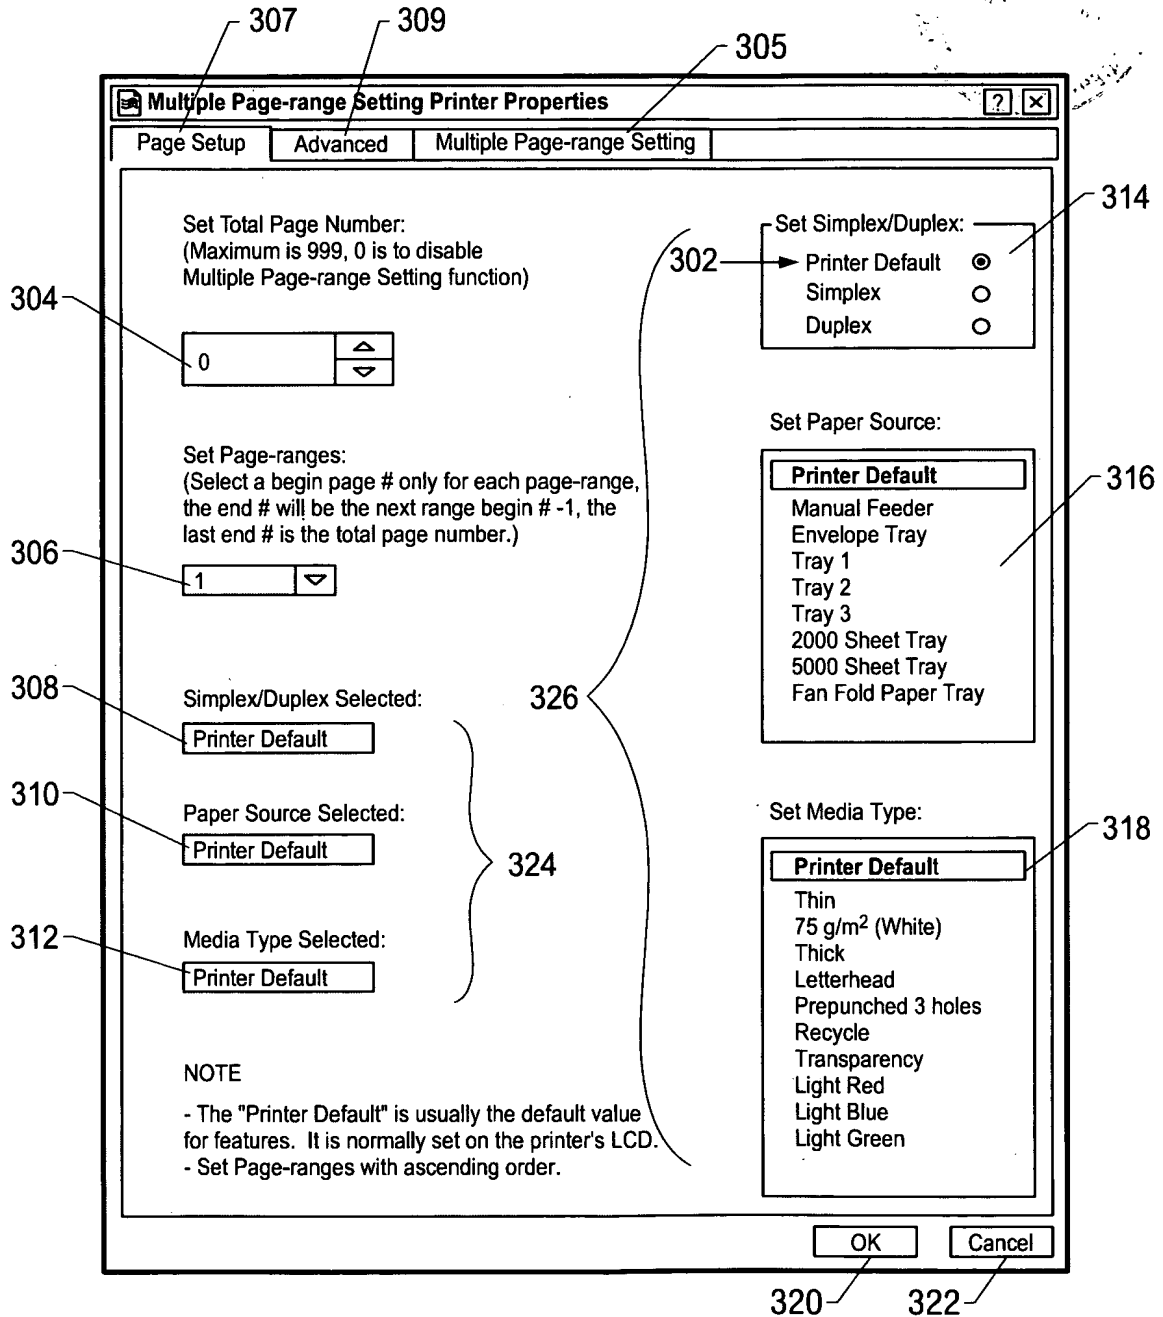
300

FIG. 3

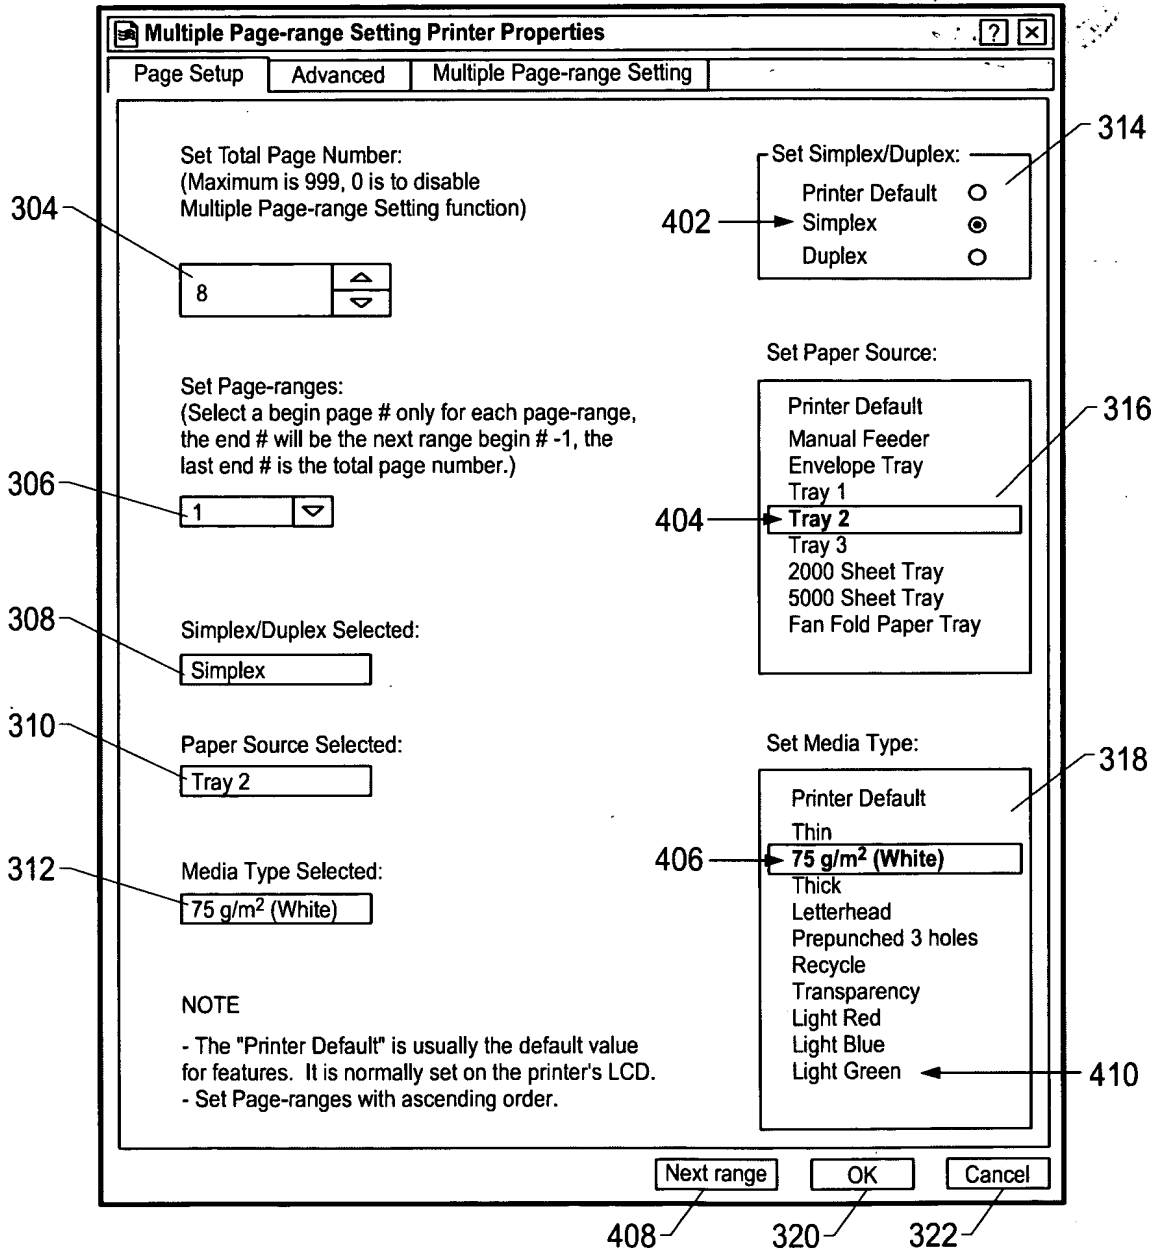


FIG. 4

Multiple Page-range Setting Printer Properties

Page Setup Advanced Multiple Page-range Setting

Set Total Page Number:
(Maximum is 999, 0 is to disable Multiple Page-range Setting function)

304 8

Set Page-ranges:
(Select a begin page # only for each page-range, the end # will be the next range begin # -1, the last end # is the total page number.)

306 2

308 Simplex/Duplex Selected:
Duplex

310 Paper Source Selected:
Manual Feeder

312 Media Type Selected:
Recycle

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

502

- Printer Default ☐
- Simplex ☐
- Duplex ☒

Set Paper Source:

504

- Printer Default
- Manual Feeder
- Envelope Tray
- Tray 1
- Tray 2
- Tray 3
- 2000 Sheet Tray
- 5000 Sheet Tray
- Fan Fold Paper Tray

Set Media Type:

506

- Printer Default
- Thin
- 75 g/m² (White)
- Thick
- Letterhead
- Prepunched 3 holes
- Recycle
- Transparency
- Light Red
- Light Blue
- Light Green

314

316

318

408 Next range

320 OK

322 Cancel

FIG. 5

7/12

600

Multiple Page-range Setting Printer Properties

Page Setup Advanced **Multiple Page-range Setting**

Set Total Page Number:
(Maximum is 999, 0 is to disable
Multiple Page-range Setting function)

304 8

Set Page-ranges:
(Select a begin page # only for each page-range,
the end # will be the next range begin # -1, the
last end # is the total page number.)

306 5

308 Simplex/Duplex Selected:
Simplex

310 Paper Source Selected:
Tray 3

312 Media Type Selected:
Light Green

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

602 Printer Default ☐ Simplex ☒ Duplex ☐

Set Paper Source:

316 Printer Default
Manual Feeder
Envelope Tray
Tray 1
Tray 2
604 Tray 3
2000 Sheet Tray
5000 Sheet Tray
Fan Fold Paper Tray

Set Media Type:

318 Printer Default
Thin
75 g/m² (White)
Thick
Letterhead
Prepunched 3 holes
Recycle
Transparency
Light Red
Light Blue
606 Light Green

408 Next range 320 OK 322 Cancel

FIG. 6

Multiple Page-range Setting Printer Properties

Page Setup Advanced Multiple Page-range Setting

Set Total Page Number:
(Maximum is 999, 0 is to disable
Multiple Page-range Setting function)

304 8

Set Page-ranges:
(Select a begin page # only for each page-range,
the end # will be the next range begin # -1, the
last end # is the total page number.)

306 8 708

308 Simplex/Duplex Selected:
Simplex

310 Paper Source Selected:
Tray 2

312 Media Type Selected:
75 g/m² (White)

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

702

Printer Default ☐ 314

Simplex ☒

Duplex ☐

Set Paper Source:

316

Printer Default

Manual Feeder

Envelope Tray

Tray 1

704 Tray 2

Tray 3

2000 Sheet Tray

5000 Sheet Tray

Fan Fold Paper Tray

Set Media Type:

318

706

Printer Default

Thin

75 g/m² (White)

Thick

Letterhead

Prepunched 3 holes

Recycle

Transparency

Light Red

Light Blue

Light Green

Next range 408 OK 320 Cancel 322

FIG. 7

9/12

800

Multiple Page-range Setting Printer Properties

Page Setup Advanced **Multiple Page-range Setting**

Set Total Page Number:
(Maximum is 999, 0 is to disable
Multiple Page-range Setting function)

8

Set Page-ranges:
(Select a begin page # only for each page-range,
the end # will be the next range begin # -1, the
last end # is the total page number.)

306

802

806

708

1 (1-1)
2 (2-4)
5 (5-7)
8 (8-8)

x Selected:

Simplex

Paper Source Selected:
Tray 2

Media Type Selected:
75 g/m² (White)

NOTE

- The "Printer Default" is usually the default value for features. It is normally set on the printer's LCD.
- Set Page-ranges with ascending order.

Set Simplex/Duplex:

Printer Default ☐
Simplex ☒
Duplex ☐

Set Paper Source:

Printer Default
Manual Feeder
Envelope Tray
Tray 1
Tray 2
Tray 3
2000 Sheet Tray
5000 Sheet Tray
Fan Fold Paper Tray

Set Media Type:

Printer Default
Thin
75 g/m² (White)
Thick
Letterhead
Prepunched 3 holes
Recycle
Transparency
Light Red
Light Blue
Light Green

Next range OK Cancel

FIG. 8

FIG. 8

TABLE 900

#	PAGE-RANGE	SINGLE/ DUPLEX	PAPER SOURCE	MEDIA TYPE	ETC.
1	1-1	S	TRAY 2	75 g/m ² (WHITE)	
2	2-4	D	MANUAL FEEDER	RECYCLE (GRAY)	
3	5-7	S	TRAY 3	GREEN	
4	8-8	S	TRAY 2	75 g/m ² (WHITE)	

FIG. 9A

TABLE 950

902 →

#	PAGE-RANGE	SINGLE/ DUPLEX	PAPER SOURCE	MEDIA TYPE	ETC.
1	1-2	D	MANUAL FEEDER	GREEN COLORED	
2	3-6	S	TRAY 1	THIN	
3	7-20	S	TRAY 3	RECYCLE	
4	21-22	D	TRAY 2	LETTERHEAD	
5	23-200	S	LCT	THICK	

FIG. 9B

10040-2032860

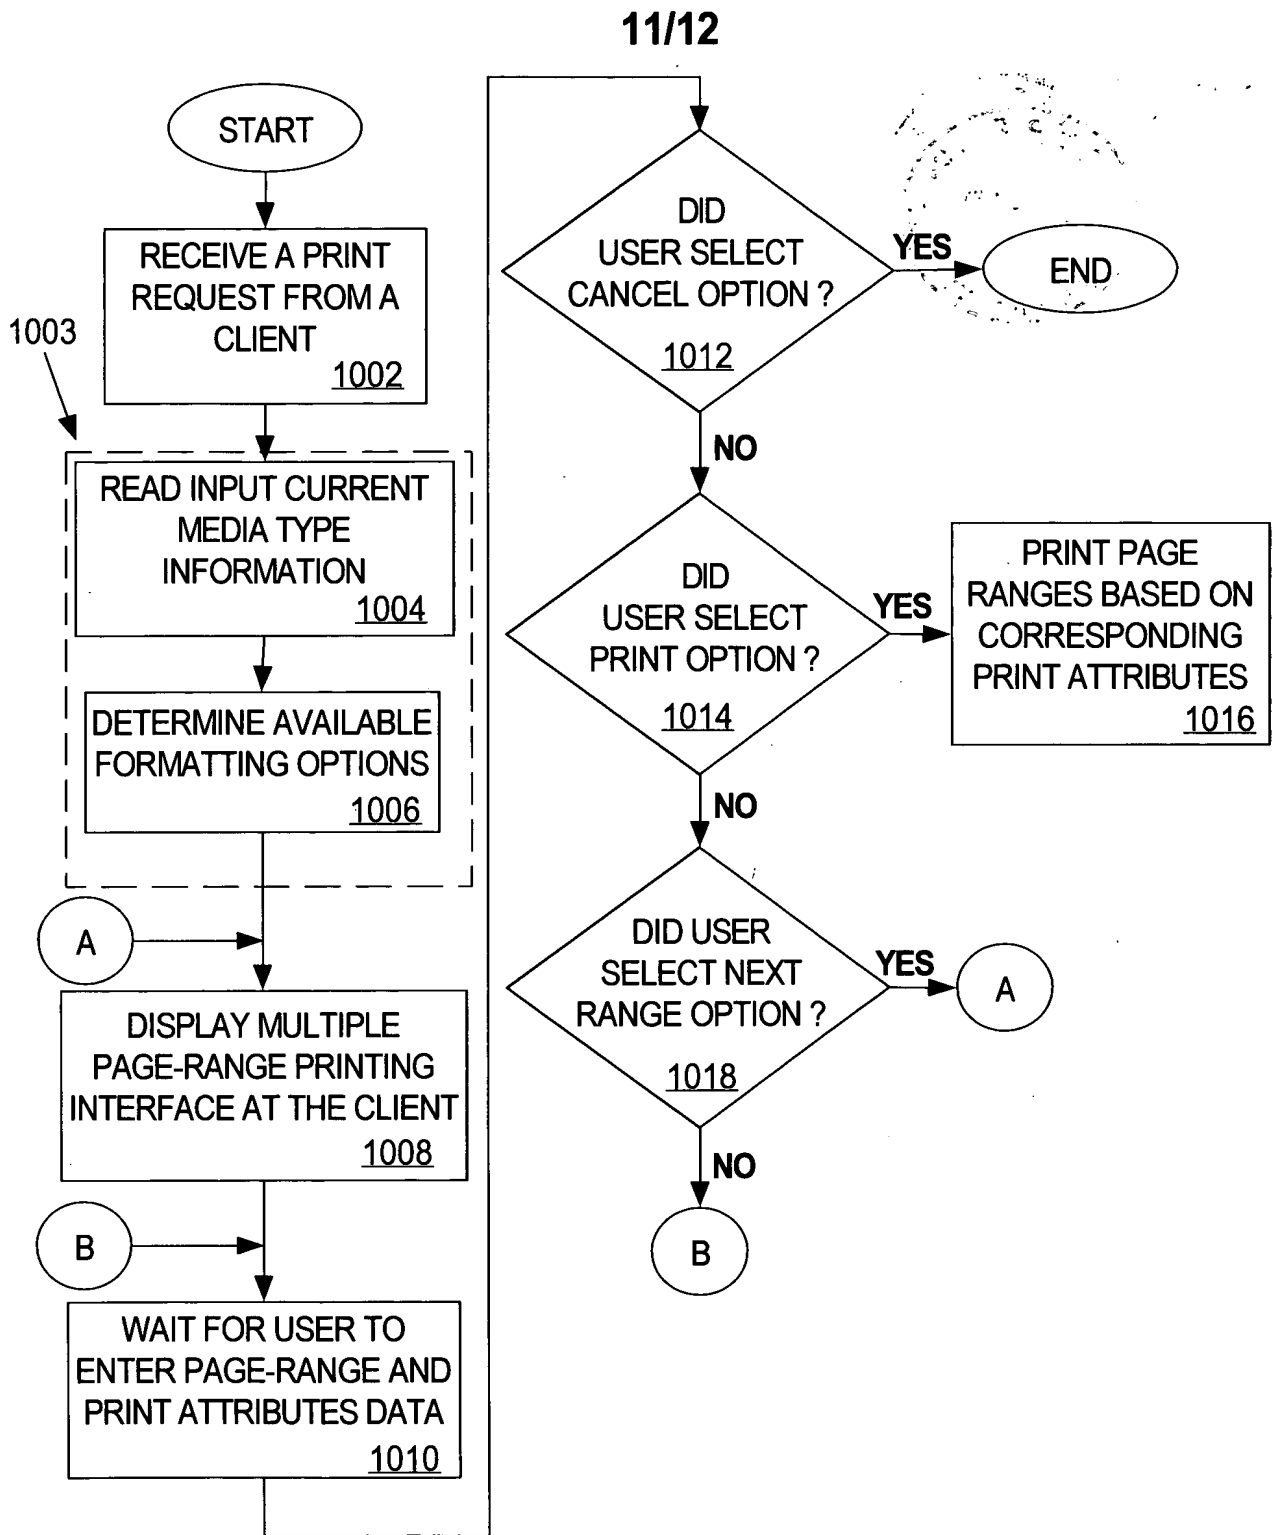


FIG. 10

12/12

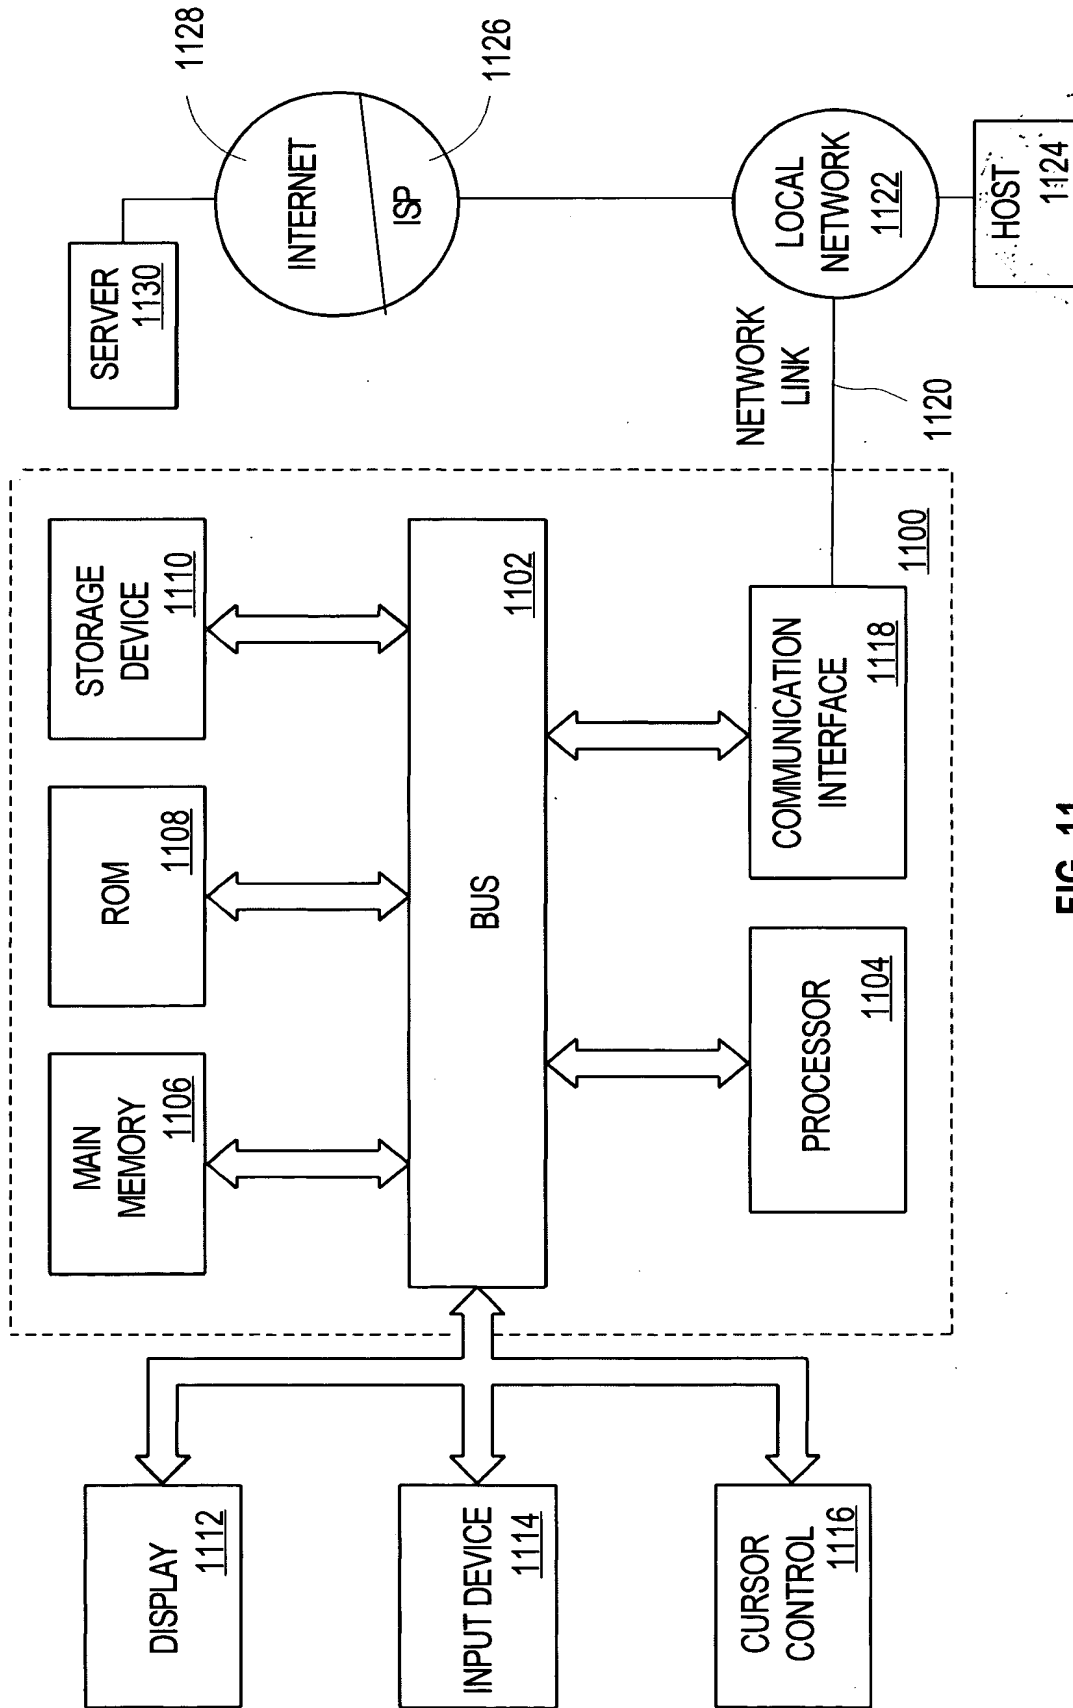


FIG. 11